

Multi Function RainFlo Float Switch Mounted in Tank at desired switching level. Float switches at approximately 45 degrees up or down.

Manual Valve Control
Pull Up and Turn to
Rotate Valve

Terminal Block "F"
In 3Way Valve

24v Brass
3Way Valve
with 24v Actuator

Watertight Wiring Grommets

Source 1 Inlet


Source 2 Inlet

Output

NOTE: This drawing is for illustrative purposes only. Actual systems and designs may vary. Always check with local building codes as they will apply. Electrical work to be performed by licensed professional. Points of use shall be labeled as: "Non Potable water, Do Not Drink!"

Valve Note 1:
To access terminal block F in actuator, remove red valve position pointer with 2 mm hex wrench. Next, loosen the 4 Philips head screws and lift cover off.

Valve Note 2:
In order to maintain the water tight integrity of the housing be sure to use appropriate wire size and type at grommet. **Water leakage will damage the valve's electronics. Locate in protected area.**

CHK BY:	APP BY:	DRAWN BY: CMG	QUOTE NO.:	SH.# 1 OF 1
RainFlo Float Switch and 3-Way Valve Wiring Diagram				
		RainHarvest Systems LLC. 4475 Alicia Lane Suite 100 Cumming, GA 30028 Tel: 770-889-2533 Fax: 770-889-2577		